

1 What's in the Box

① DVD Recorder



② Remote Control and 2 AAA Batteries




③ RF Coaxial cable



④ Video/Audio (AV) cable (Yellow/Red/White)



2 Connect to DVD Recorder

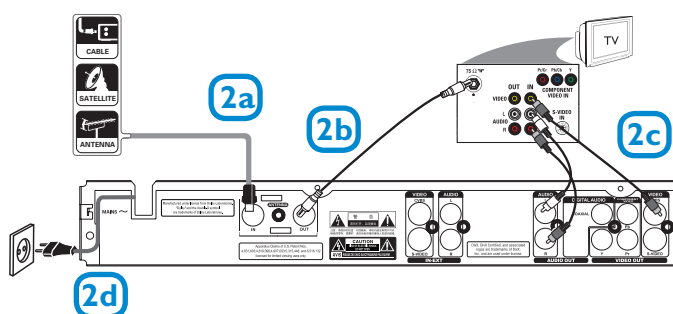

2a Plug in RF OUT(or Satellite Receiver [RF OUT or TO TV]) cable of the Set-top Box/ cable TV to **ANTENNA IN** jack on the back of DVD Recorder.

2b Use supplied RF Coaxial cable to connect DVD Recorder's **ANTENNA OUT** jack to TV's ANTENNA IN jack.


2c Use supplied AV cables(Yellow/Red/White) to connect VIDEO (CVBS) jack and AUDIO L/R OUT of DVD Recorder to corresponding A/V In jacks on the TV set.

2d Insert DVD Recorder's power cord into AC power outlet.

Helpful Hints:

Please see the manual for more connections.

3 Start Basic Settings

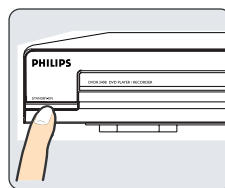


3a Press **STANDBY-ON** of the recorder to power on.

Note: to install successfully, making Set-top Box power on is preferred.



3b Switch on TV and select the correct viewing channel. Blue background of PHILIPS DVD RECORDER appears on TV.

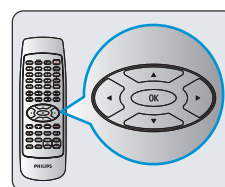


3c Press **SYSTEM SETUP** on the remote. press button to slide on the setup menu. Press to select required options and press **OK** to confirm.

3d Highlight display, then press .

Set **TV CHANNEL**
Choose { Channel Search } and press **OK** on the remote control to start searching.


Note: PAL D/K type is default color system around most regions of China. If you're sure the PAL I type is supported in your region, please set your TV to PAL I.

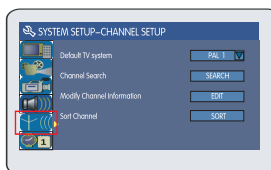

3e Highlight display, then press .

Select languages.


- Select osd language displayed on TV screen.
- Select menu language displayed on TV screen.
- Select subtitles language displayed on TV screen.
- Select audio language displayed on TV screen.

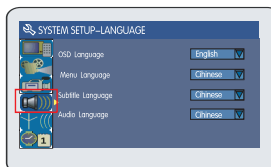

3f Highlight display, then press .


Set Date & Time.

Press numerical keys 0~9 to input required date and time, then press **OK** to confirm.

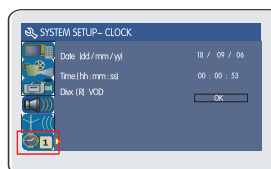


3g Press **SYSTEM MENU** to exit.

4 Start Recording

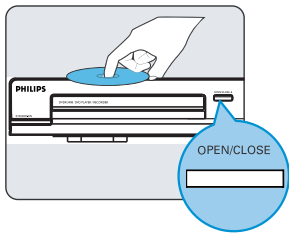


- 4a** Open disc tray, load recordable DVD±R/±RW/+R DL with label faced up-wards.

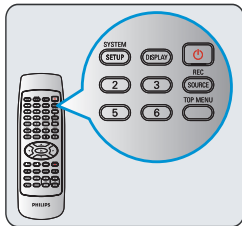


- 4b** To record TV program, press **REC SOURCE** to select {Tuner}, then press **CH+** and **CH-** key to select program channels.

If recording the programs from external equipment connected to DVD recorder, press **REC SOURCE** repeatedly until you find the corresponding external input channels. { Front CVBS }, { Front S-Video }, { Rear CVBS }, { Rear S-Video }, { DV }.

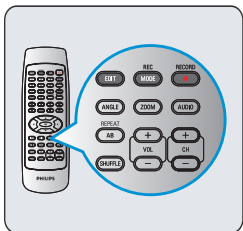


- 4c** Press **REC MODE** to select preferred recording mode which determine image quality and max recording time.

Maximum Recording Time per disc		
1 hour	HQ(High Quality)	1 hour mode
2 hours	SP(DVD quality-Standard Play)	2 hours mode
2.5 hours	SP+(DVD quality- Stand play plus)	2.5 hours mode
3 hours	LP(VHS quality- Long play)	3 hours mode
4 hours	EP(VHS Extended Play)	4 hours mode
6 hours	SLP(VHS quality-Super Long Play)	6 hours mode

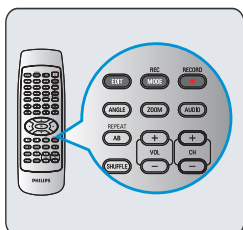


- 4d** Press **REC** ● to start recording.

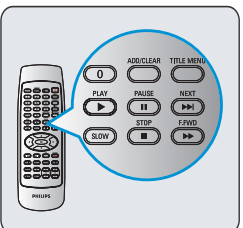


- 4e** To pause recording, press **II**. To recover recording, press **REC** ●. Press **STOP** ■ to halt recording.
→ Don't unload the disc tray until the information on front panel disappears.

5 Start Playback

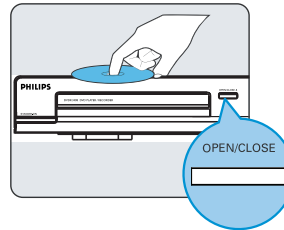


To play disc


- 5a** Open disc tray and load disc, with label faced upwards.
Supported disc format:

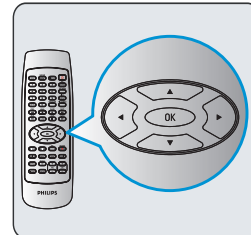

- 5b** Playback will start automatically, otherwise, press **PLAY** ►.
→ If disc menu appears press ◀▶▲▼ key to select, highlight required options and press **OK** to start playback.

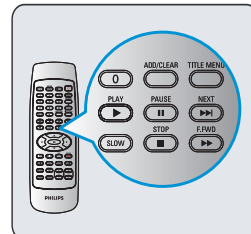

- 5c** To stop playback, press **STOP** ■.

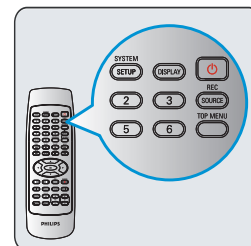

Enjoy TV program

- 5d** Press **REC SOURCE** to select {Tuner}, then press **CH+** and **CH-** key to select corresponding channel.

Aquiring Image

- Check AV mode on TV. The mode can be divided into FRONT, A/V IN or VIDEO. To toggle among varied modes with remote control.
- Or, select TV channel 1 with remote control, then press **CH+**, **CH-** button to aquire image.
- please see TV manual for details.

Aquiring Sound

- Connect AUDIO L/R(red/white)jacks of DVD recorder to input jacks of TV, Stereo system or receiver. Turn on switch of all connected devices and choose required channel.